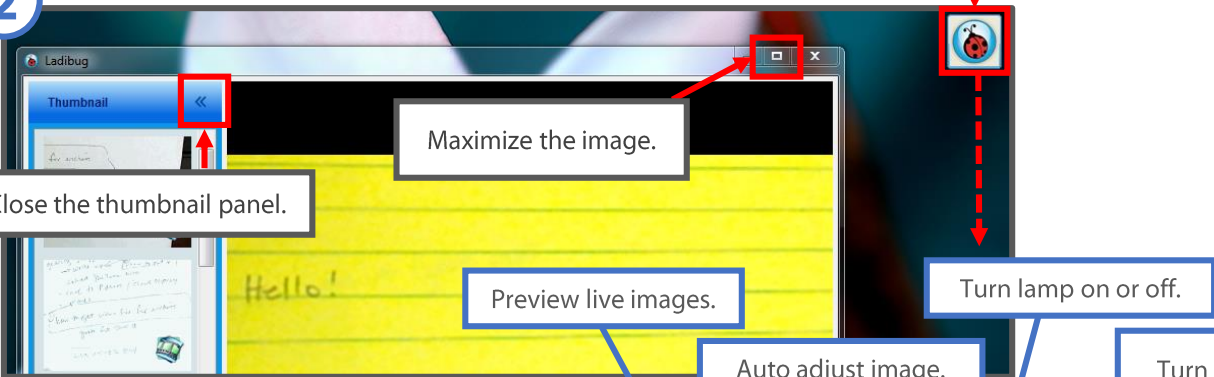


# Using the Ladibug Document Camera

1 Double-click the Ladibug icon on the Desktop.



2 Adjust settings to suit your needs.



Explore the Ladibug menu options.

Maximize the image.

Close the thumbnail panel.

Preview live images.

Turn lamp on or off.

Auto adjust image.

Turn doc camera on or off.

Adjust image brightness.

Set video compression and audio options.

Adjust live images with Camera Setting window.

Mask, or hide, part of the image.

Spotlight a particular area.

Create time lapse recording.

Record the image.













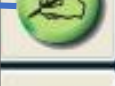

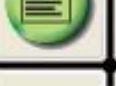

Capture an image.

Open annotation tools.

Freeze the live image.

Increase image size.

Launch main menu.

## Need more information?

Check out the complete [User Manual](#) for detailed instructions for using all of the menu options.

Just need the basics? Check out this [helpful video](#).

## Need help in the classroom?

Get in touch with the Helpdesk by clicking on the 